



Adjustable Outrigger/Diagonal Strut Installation Instructions

1. Determine floor joist area needing support.
2. Set mounting plate on floor joist and secure with 5 (#12x2") screws provided. Approx. 6" from outer rim joist.
3. Insert threaded bolt in support tube and adjust so it clears I-beam flange when mounting plate is inserted and chisel end of bolt is placed against the frame. If support tube is too long, simply cut square to desired length.
4. Raise floor joist with jack to desired level before tightening the nut on the threaded bolt, snug fit to 1/4 turn past.
5. For window and door alignment only.
6. For manufactured homes only, built to Federal Manufactured Home Construction & Safety Standards.

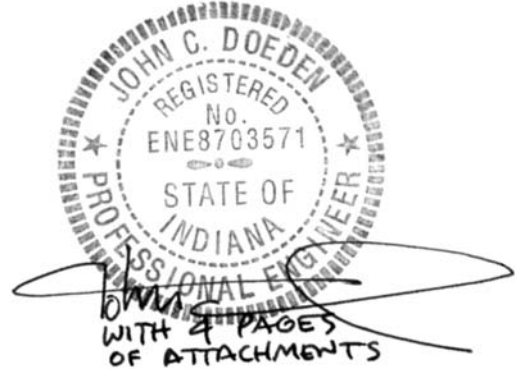


Do not use on homes while being transported.

NOTE: This component is not designed or intended to replace any foundation supports required by the home's manufacturer and is not a repair for damaged joists.

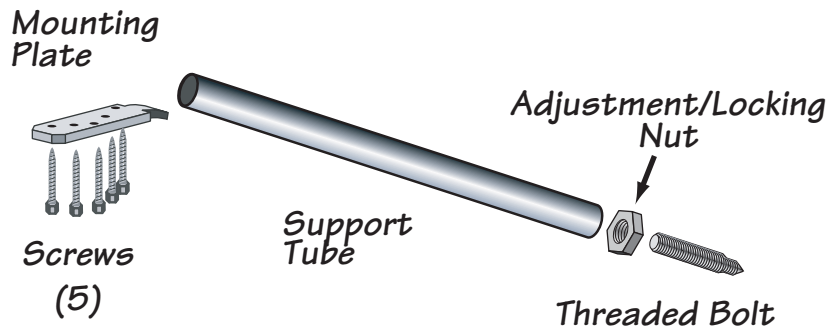


Part # 59361
24" for 14 ft. wide

Part # 59362
36" for 16 ft. wide

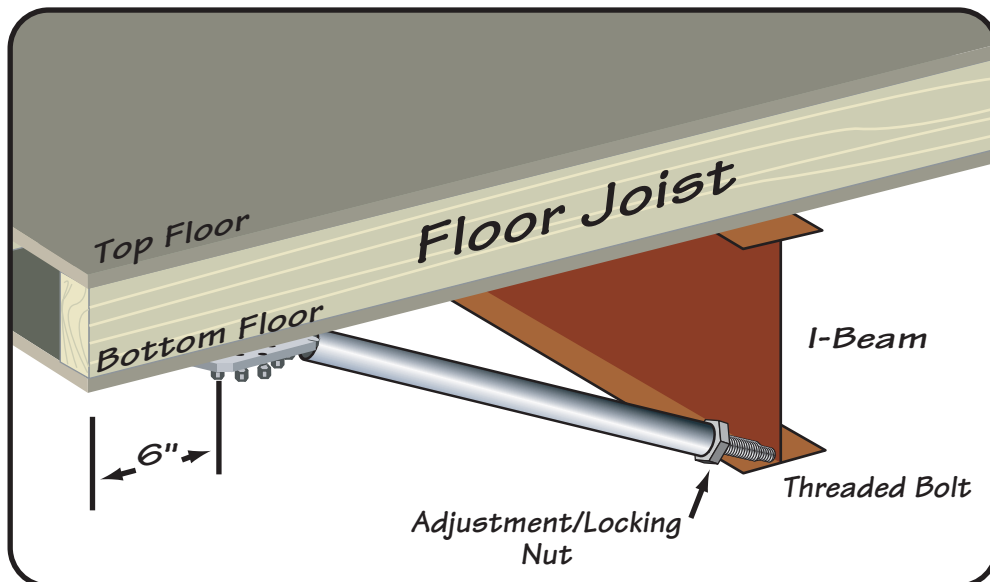

Instructions #59361-1

TIE DOWN ENGINEERING • 5901 Wheaton Drive • Atlanta GA, 30336
www.tiedown.com • (404) 344-0000 • FAX (404) 349-0401

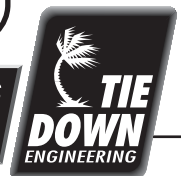

121203,270