

REPLACING STEM AND BONNET ASSEMBLY IN CONCEALED FAUCETS

Refer to the [Parts Breakdown Book](#) for replacement part numbers or [contact customer support](#) for help in finding a part

You may need several of these tools:

- Allen wrench (5/16 or 7/32)
- Channel locks
- » Crescent wrench
- » Flathead screwdriver
- » Phillips head screwdriver
- Pipe joint compound
- Soft cloth
- Teflon tape
- No tools necessary

Part key:

- | No. | Description |
|-----|--------------------------|
| 1 | Index button |
| 2 | Handle screw |
| 3 | Handle |
| 4 | Flange |
| 5 | Stem and bonnet assembly |

1. Always turn off water supply. Turn hot and cold water full on to relieve line pressure.
2. Using a flathead screwdriver or knife, lift off index button, remove handle screw using a phillips head screwdriver, remove handle.
3. Unscrew stem and bonnet assembly with an 8" crescent wrench.
4. Install new stem and bonnet.

TIP: Open the cartridge slightly to make installation easier.

5. Replace handle.
6. Turn on water, check for leaks

